

MODBUS-RTU for NECTOR200

MODBUS-RTU protocol specifications for LAN control of NECTOR200 series devices

Document: MODBUS-RTU_NECTOR200_01-21_ENG
Installed Software: NECTOR200 Rev. 6

READ AND KEEP

INDEX

GENERAL DESCRIPTION

1

Pag. 3	1.1	Modbus protocol
Pag. 3	1.2	Serial configuration
Pag. 4	1.3	Message format (Frame)
Pag. 5	1.4	Messages synchronization
Pag. 5	1.5	Error messages (exceptions)

COMMANDS DESCRIPTION

2

Pag. 6	2.1	Register reading (0x03)
Pag. 7	2.2	Single register writing (0x06)
Pag. 8	2.3	Data reading of device identification (0x2B / 0x0E)

REGISTERS AND ADDRESSES DESCRIPTION

3

Pag. 10	3.1	Analog inputs (read-only)
Pag. 11	3.2	Parameters (read / write)
Pag. 15	3.2a	Parameters (read-only)
Pag. 17	3.3	Inputs / outputs / alarms status (read-only)
Pag. 20	3.4	Device status (read / write)

GLOSSARY

4

Pag. 21	4	Glossary
---------	---	----------

1: GENERAL DESCRIPTION

1.1

MODBUS PROTOCOL

The data communication system based on Modbus protocol allows to connect up to 247 devices in a common RS485 line with standard format and communication mode.

Communication takes place in half duplex by frame (transmitted continuously); only master (PC , PLC ...) can start polling with slaves as question/answer (only one slave addressed) and the polled slave answers. The slave answers after a minimum pause of 3,5 characters between received frame and the one to be transmitted.

Also broadcast communication mode exists where the master send a request to all the slaves simultaneously, and they give no answer back; this mode it's not available with this controller.

The data serial transmission mode implemented on the controller is RTU type (Remote Terminal Unit), where data are exchanged in binary format (8 bit characters).

1.2

SERIAL CONFIGURATION

Serial line:	RS485
Baud rate:	1200, 2400, 4800, 9600, 14400, 19200, 38400
Data length:	8 bit
Parity:	none, even or odd

Serial transmission of characters in RTU format

Start	bit 7	bit 6	bit 5	bit 4	bit 3	bit 2	bit 1	bit 0	Parity (optional)	Stop
-------	-------	-------	-------	-------	-------	-------	-------	-------	----------------------	------

Each message (Frame) is made, based on MODBUS-RTU standard, by the following parts:

Start	Device address	Function code	Data	CRC16		Stop
pause (3.5 times the character transmission period)	Byte	Byte	n x Byte	LSByte	MSByte	pause (3.5 times the character transmission period)

- **Start / Stop :**
Message starts with pause higher than 3.5 times the character transmission period. See chap. 1.4 for further clarifications.
- **Device address:**
Device address with whom the master established the polling; it's a value between 1 and 247. Address 0 is reserved to the broadcast, message sent to all slave devices (not active on this controller). RS485 line allows to connect together up to 32 devices (1 Master + 31 slaves), but with appropriate "bridges" or relay devices it is possible to use the whole logical addressing field.
- **Function Code:**
Code of the function to be execute or already executed; On device are active codes 0x03 (register reading), 0x06 (single register writing) and 0x2B/0x0E (identification data reading).
- **Data:**
Data that must be exchanged.
- **CRC16:**
Error checking field based on CRC16 algorithm. CRC16 is calculated on the whole message by the master device which is transmitting and attached to the message itself. The slave, at the end of reception, calculates CRC16 on the message and compares it with the value learnt by the master; if the values do not match, the message will be considered not valid and will be discarded without sending any answer to the master.
The following fragment of C code shows the CRC16 calculation mode:

```

unsigned int CRC16
void Modbus_CRC(unsigned char *Frame, unsigned char FrameLength)
{
    unsigned char ByteCount;
    unsigned char i;
    unsigned char bit_lsb;
    CRC16 = 0xFFFF;
    for (ByteCount=0;ByteCount<FrameLength;ByteCount++)
    {
        CRC16^=Frame[ByteCount];
        for (i=0;i<8,i++)
        {
            bit_lsb = CRC16 & 0x0001;
            CRC16 = CRC16>>1;
            if (bit_lsb == 1)
                CRC16 ^= 0xA001;
        }
    }
}
    
```

1.4

MESSAGES SYNCHRONIZATION

Message synchronization between transmitter and receiver is made placing a pause on the messages at least 3.5 times the character transmission period. If the receiver does not receive any Byte for 3.5 times the character transmission period, consider the last message completed and set the next Byte received as the first one of a new message.

The slave, once received the complete message, decodes it and, if there are no errors, sends the answer message to the master. To send the answer, slave keeps RS485 line busy, wait a pause of 3.5 times the character transmission period, send the complete message, wait 3.5 times the character transmission period and then release the RS485 line.

The master unit will have to consider these periods to avoid risks of transmission overlap; in particular must be set a proper answer reception time-out before starting a new transmission (typical time-out value: 500msec or higher, for a baud rate = 9600).

1.5

ERROR MESSAGES (EXCEPTIONS)

The device, if not possible to complete the required operation, answers with an error message, in the following format:

<i>Device address</i>	<i>Function Code</i>	<i>Exception Code</i>	<i>CRC16</i>	
Byte	Byte	Byte	LSByte	MSByte

- **Device address:**
Address of slave device answering
- **Function Code:**
Function code MSb =1 (to show exception); i.e. 0x83 (for 0x03 reading) or 0x86 (for 0x06 writing)
- **Exception Code:**
Exception codes handled by the device are the following:

<i>Exception code</i>	<i>Description</i>	<i>Exception cause</i>
0x01	Function not implemented	A function code not available was requested, different from 0x03, 0x06 and 0x2B/0x0E.
0x02	Address not valid	It's generated in several situations: <ul style="list-style-type: none"> - a not implemented register has been requested (or a not-existing area) - a reading of a number of registers that goes further on the implemented area has been requested (starting from requested address) - tried to write on a read-only area
0x03	Value not valid for datum	It's generated in several situations: <ul style="list-style-type: none"> - message 0x2B/0x0E DeviceIdCode is not correct - has been tried to write a parameter with an out of range value

Error control field based on the CRC16 algorithm.

Note:

In case the device identifies in the received message an error on format or in CRC16, the message is discarded (considered not valid) and no answer is sent.

2: COMMANDS DESCRIPTION

All the registers, to equalize the interpretation, are handled in a Word format (16 bit), even if an 8-bit parameter is contained.

2.1

REGISTER READING (0x03)

Format of command sent by the Master:

<i>Device address</i>	<i>Function Code</i>	<i>Register address</i>		<i>Number of registers</i>		<i>CRC16</i>	
Byte	Byte	MSByte	LSByte	MSByte	LSByte	LSByte	MSByte

- **Device address:**
Address of slave device to be polled
- **Function Code:**
Function code to be executed, in this case register reading (0x03)
- **Register address:**
Starting register address for reading expressed with two Bytes; (MSByte) and (LSByte).
- **Number of registers:**
indicates the number of Word required from the starting address. If a number of registers more than 1 is requested, the answer message will provide all the registers required with consecutive addresses starting from the address shown on the "register address" field.
The number of registers to read is expressed on two Bytes, particularly for this controller (MSByte) must always be 0x00 and (LSByte) with range 1-10.
- **CRC16:**
Error control field based on the CRC16 algorithm.

Format of answer message from slave:

<i>Device address</i>	<i>Function Code</i>	<i>Bytes of datum No.</i>	<i>Datum 1</i>		<i>Datum 2</i>		<i>Datum n</i>		<i>CRC16</i>	
Byte	Byte	Byte	MSByte	LSByte	MSByte	LSByte	MSByte	LSByte	LSByte	MSByte

- **Device address:**
Address of slave device answering
- **Function Code:**
Function code to be answered to, in this case register reading (0x03)
- **Bytes' number of datum:**
Contains the total Bytes number of data.
Consider that the Bytes' number of datum is the double of the number of registers (because we talk about word). I.e. if in the polling message 2 registers are requested, in the answer message Bytes' number of datum must be set as 4.
- **Datum n :**
Contains data sequences each expressed on two Bytes; (MSByte) and (LSByte).
- **CRC16:**
Error control field based on the CRC16 algorithm.

Format of command sent by the Master:

Device address	Function Code	Register address		Datum		CRC16	
Byte	Byte	MSByte	LSByte	MSByte	LSByte	LSByte	MSByte

- **Device address:**
Address of slave device to be polled
- **Function Code:**
Function code to be executed, in this case single register writing (0x06)
- **Register address:**
address of register to write expressed with two Bytes; (MSByte) and (LSByte).
- **Data:**
Value to be assigned to the register expressed with two Bytes; (MSByte) and (LSByte).
- **CRC16:**
Error control field based on the CRC16 algorithm.

Format of answer message from slave:

Device address	Function Code	Register address		Datum		CRC16	
Byte	Byte	MSByte	LSByte	MSByte	LSByte	LSByte	MSByte

The answer message is a simple echo of the polling message to confirm that the variable has been modified.

2.3

DATA READING OF DEVICE IDENTIFICATION (0x2B / 0x0E)

Format of command sent by the Master:

<i>Device address</i>	<i>Function Code</i>	<i>MEI type</i>	<i>Read Device Id Code</i>	<i>Object Id</i>	<i>CRC16</i>	
Byte	Byte	Byte	Byte	Byte	LSByte	MSByte

- **Device address:**
Address of slave device to be polled
- **Function Code:**
Function code to be executed, in this case identification data reading (0x2B)
- **MEI type:**
Modbus Encapsulated Interface type: it must be 0x0E.
- **Read Device Id Code:**
Indicates the access type to data: it must be 0x01.
- **Object Id:**
Indicates the starting object for data reading (range: 0x00 – 0x02).
- **CRC16:**
Error control field based on the CRC16 algorithm.

Format of answer message from slave:

<i>Device address</i>	<i>Function code</i>	<i>MEI Type</i>	<i>Read Device Id Code</i>	<i>Confor mity level</i>	<i>More Follows</i>	<i>Next Object Id</i>	<i>Number Of Object</i>	<i>Object Id (n)</i>	<i>Object Length (n)</i>	<i>Object Value (n)</i>	<i>CRC16</i>	
Byte	Byte	Byte	Byte	Byte	Byte	Byte	Byte	Byte	Byte	ASCII String	LSByte	MSByte

- **Device address:**
Address of slave device answering
- **Function Code:**
Function code to be executed, in this case identification data reading (0x2B)
- **MEI type:**
Modbus Encapsulated Interface type: it must be 0x0E.
- **Read Device Id Code:**
Indicates the access type to data: it must be 0x01.
- **Conformity level:**
indicates the slave conformity level: it is always 0x01.
- **More Follows:**
indicates the number of additional transactions requested: it is always 0x00.
- **Next Object Id:**
indicates the object that has to be requested in the eventual following transaction: it is always 0x00
- **Number Of Object:**
number of objects that follow (1, 2 o 3).

- **List of:**
 - **Object Id:**
current object number .
 - **Object Length:**
length of following string.
 - **Object Value:**
ASCII string that contains the identification information.
- **CRC16:**
Error control field based on the CRC16 algorithm.

Reading example of all controllers identification information with software NECTOR200 rel. 6 (address 1)

Demand message:

- **Device address:** 0x01
- **Function code:** 0x2B
- **MEI type:** 0x0E
- **Read DeviceIdCode:** 0x01
- **ObjectId:** 0x00
- **CRC16:** to be calculated on previous values

Answer message:

- **Device address:** 0x01
- **Function code:** 0x2B
- **MEI type:** 0x0E
- **Read DeviceIdCode:** 0x01
- **Conformity level:** 0x01
- **More Follows:** 0x00
- **Next ObjectId:** 0x00
- **Number Of Object:** 0x03
- **ObjectId:** 0x00
- **Object Length:** 0x04
- **Object Value:** 'PEGO' (Vendor Name field)
- **ObjectId:** 0x01
- **Object Length:** 0x08
- **Object Value:** 'NECT_200' (Product Code field)
- **ObjectId:** 0x02
- **Object Length:** 0x03
- **Object Value:** '006' (Revision field)
- **CRC16:** to be calculated on previous values

3: REGISTERS AND ADDRESSES DESCRIPTION

Each register has a 16 bit dimension. It has been formed some blocks of variables (each with a different MSByte address) basing on the the type of these variables. In the followings paragraphs are described in the detail all the available blocks and, for each block, the implemented variables.

At the beginning of each table it has been indicated in the first row if its data could be only read (READ-ONLY) or written and read (READ/WRITE).

TABLE COLUMNS DESCRIPTION:

- **Register :**
It indicates the register address that has to be used in the structure of Modbus command for reading or writing the data into device. It is expressed on two Bytes: (MSByte) and (LSByte).
- **Description :**
Description of the register and possible corresponding programming variable of the device.
- **Meaning and Bytes range:**
Dimension (MSByte and LSByte), allowed range and notes about register.
- **U.M. :**
Unit of measure of datum contained in the register.
- **Conv. :**
Values contained in the registers that represent signed variables require a conversion and they are marked from **X** sign in the following column.
Conversion procedure:
 - If the value contained in the register is included between 0 and 32767, it represents a positive or null number (the results is the value itself)
 - If the value contained in the register is included between 32768 and 65535, it represents a negative number (the results is the register value - 65536)
- **Molt :**
It indicates the multiplication factor that has to be mapped to register's datum and that coupled to columns U.m and Conv permits the right interpretation of the value to convert.
Esempi:
A datum (**0x0012**) = 18 with Molt =**0,1** / U.m= °C / Conv=**C** corresponds to a temperature of (18x0,1)= **1,8 °C**
A datum (**0xFFFF0**) = 65520 with Molt =**0,1** / U.m= °C / Conv=**C** corresponds to a temperature [(65520 – 65536) x0,1] = **-1,6 °C**
A datum (**0x0078**) = 120 with Molt =**1** / U.m= **min** / Conv=**C** corresponds to a time of (120x1)= **120 minutes**
A datum (**0x0014**) = 20 with Molt =**0,1** / U.m= °C / Conv=**C** corresponds to a temperature of (20x0,1)= **2,0 °C**

3.1

ANALOG INPUTS - READ-ONLY

Register	Description	Bytes meaning and range		U.M.	Conv	Molt
256	Ambient temperature	MSByte LSByte	Resolution 0,1°C range: -45°C .. +99°C Values > +99°C indicate broken probe	°C	X	0,1
257	Evaporator temperature	MSByte LSByte	Resolution 0,1°C range: -45°C .. +99°C Values > +99°C indicate broken probe	°C	X	0,1
258	Datalogger temperature	MSByte LSByte	Resolution 0,1°C range: -45°C .. +99°C Values > +99°C indicate broken probe	°C	X	0,1

Register	Description	Bytes meaning and range		U.M.	Conv	Molt
259	Probe 4 temperature	MSByte LSByte	Resolution 0,1°C range: -45°C .. +99°C Values > +99°C indicate broken probe	°C	X	0,1
260	Probe 5 configurable	MSByte LSByte	If parameter An5 =1 or 2 (humidity): Resolution 1 %RH range: 0.. +100 %RH	%RH		1
			If parameter An5 =3 (pressure): Resolution 0,1 Bar range: -1,0.. +90,0 Bar	Bar	X	0,1

3.2

PARAMETERS - READ / WRITE

Register	Description	Bytes meaning and range		U.M.	Conv	Molt
768	temperature set point	MSByte LSByte	0.1 °C steps, with sign range: LSE..HSE	°C	X	0,1
769	r0 temperature differential	MSByte LSByte	0.1 °C steps range: 0.2..10.0 °C	°C		0,1
770	d0 defrosting period	MSByte LSByte	1 hour steps range: 0..24 hours (0 = disable defr.)	hours		1
771	dd2 Delay to start defrosting on the second evaporator	MSByte LSByte	1 sec steps range: 0..10 secs	sec		1
772	d21 end-of-defrosting 1 temperature	MSByte LSByte	1 °C steps, with sign range: -35..+45 °C	°C	X	1
773	d22 end-of-defrosting 2 temperature	MSByte LSByte	1 °C steps, with sign range: -35..+45 °C	°C	X	1
774	d31 max defrosting 1 duration	MSByte LSByte	1 minute steps range: 1..240 minutes	min		1
775	d32 max defrosting 2 duration	MSByte LSByte	1 minute steps range: 1..240 minutes	min		1
776	d7 dripping duration	MSByte LSByte	1 minute steps range: 0..10 minutes	min		1
777	F5 fans stop duration post defrosting	MSByte LSByte	1 minute steps range: 0..10 minutes	min		1

Register	Description	Bytes meaning and range		U.M.	Conv	Molt
778	A1 minimum temperature alarm	MSByte LSByte	0,1 °C steps, with sign range: -45,0°C..(A2-1°C)	°C	X	0,1
779	A2 maximum temperature alarm	MSByte LSByte	0,1 °C steps, with sign range: (A1+1°C)..+99,0°C	°C	X	0,1
780	dFr Real time defrost enable	MSByte LSByte	0 = disabled 1 = enabled	num		1
781	dF1 Defrost time 1	MSByte LSByte	10 minute steps range: 0..143	min		10
782	dF2 Defrost time 2	MSByte LSByte	10 minute steps range: 0..143	min		10
783	dF3 Defrost time 3	MSByte LSByte	10 minute steps range: 0..143	min		10
784	dF4 Defrost time 4	MSByte LSByte	10 minute steps range: 0..143	min		10
785	dF5 Defrost time 5	MSByte LSByte	10 minute steps range: 0..143	min		10
786	dF6 Defrost time 6	MSByte LSByte	10 minute steps range: 0..143	min		10
787	tdS Day start programming	MSByte LSByte	10 minute steps range: 0..143	min		10
788	tdE Day end programming	MSByte LSByte	10 minute steps range: 0..143	min		10
789	F3 fans status with stopped compressor	MSByte LSByte	range: 0..1,2 (0 = fans in continuous gear)	num		1
790	F4 fans stop in defrosting	MSByte LSByte	range: 0..1, (1 = stopped fans)	num		1
791	dPo Defrost at Power On	MSByte LSByte	0 = disabled 1 = defrost at power-on (if possible)	num		1
792	dSE Smart defrost	MSByte LSByte	0 = disabled 1 = enabled	num		1
793	dSt Smart defrost Setpoint (if dSE=1)	MSByte LSByte	1 °C steps range: -30..30 °C	°C	X	1
794	dFd Defrost view	MSByte LSByte	0 = current temperature 1 = temperature at start of defrost 2 = "DEF"	num		1
795	ALr Delay in alarm reactivation	MSByte LSByte	1 minutes steps range: 0..240 minutes 0 = disabled	min		1

Register	Description	Bytes meaning and range		U.M.	Conv	Molt
796	ALd temperature alarm signaling delay	MSByte LSByte	1 minutes steps range: 0..240 minutes	min		1
797	Alt Reference probes for minimum or maximum temperature alarms	MSByte LSByte	0 = Ambient and Datalogger probes 1 = Ambient probe 2 = Datalogger probe	num		1
798	AtE Temperature alarm enabling	MSByte LSByte	0 = always enabled 1 = disabled in case of standby 2 = disabled if door switch active 3 = disabled if standby or door switch active	num		1
799	C1 compressor re-starting delay	MSByte LSByte	1 minute steps range: 0..15 minutes	min		1
800	CE1 Duration of compressor ON time in the case of faulty ambient probe	MSByte LSByte	1 minute steps range: 0..240 minutes (0 = disabled)	min		1
801	CE2 Duration of compressor OFF time in the case of faulty ambient probe	MSByte LSByte	1 minute steps range: 5..240 minutes	min		1
802	doC compressor safety time for door switch	MSByte LSByte	1 minute steps range: 0..15 minutes (0 = disabled)	min		1
803	tdo compressor restart time after door opening	MSByte LSByte	1 minute steps range: 0..240 minutes (0 = disabled)	min		1
804	tlo Cell light alarm signal and display delay time	MSByte LSByte	1 minute steps range: 0..240 minutes (0 = disabled)	min		1
805	FSt fans blockage temperature	MSByte LSByte	1 °C steps, with signs range: -45..+99 °C	°C	X	1
806	Fd Differential on fans blockage	MSByte LSByte	1 °C steps range: 1..10 °C	°C		1
807	LSE temperature set-point minimum limit	MSByte LSByte	1 °C steps, with sign range: -45°C..(HSE-1°C)	°C	X	1
808	HSE temperature set-point maximum limit	MSByte LSByte	1 °C steps, with sign range: (LSE+1°C)..+99°C	°C	X	1

Register	Description	Bytes meaning and range		U.M.	Conv	Molt
809	dnE Night mode enable (energy saving)	MSByte LSByte	0 = disabled 1 = enabled	num		1
810	nSC Correction during night operation	MSByte LSByte	0,1 °C steps, with sign range: -20,0 ÷ +20,0 °C	°C	X	0,1
811	StA Temperature setting for aux. relay	MSByte LSByte	1 °C steps range: -45..99 °C	°C	X	1
812	StU Humidity set	MSByte LSByte	1 %RH steps range: 0..100 %RH	%RH		1
813	r1 Humidity differential	MSByte LSByte	1 %RH steps range: 1..20 %RH	%RH		1
814	FsE Evaporator fan speed	MSByte LSByte	1 % steps range: 20..100 %	%		1
815	StP Condenser fan pressure set	MSByte LSByte	0,1 Bar steps range: -0,5..90,0 Bar	Bar	X	0,1
816	r2 Differential condenser fan pressure SET	MSByte LSByte	0,1 Bar steps range: 0,6..5,0 Bar	Bar		0,1
817	iov Fan inverter offset	MSByte LSByte	0,1 Bar steps range: 0,5..2,5 Bar	Bar		0,1
818	iLv Fan inverter: minimum value of the 0-10V output	MSByte LSByte	0,1 V steps range: 0,0 .. 10,0 V	V		0,1
819	iHv Fan inverter: maximum value of the 0-10V output	MSByte LSByte	0,1 V steps range: 0,0 .. 10,0 V	V		0,1
820	bov Fan boost	MSByte LSByte	1 sec steps range: 0 .. 240 sec	sec		1

3.2a

PARAMETERS - READ-ONLY

Registro	Descrizione	Significato e range Bytes		U.M.	Conv	Molt
512	nrE Number of evaporators	MSByte LSByte	1 = 1 evaporator 2 = 2 evaporators	num		1
513	d1 Defrost type	MSByte LSByte	0 = A resistance 1 = hot gas 2 = A resistance, thermostat	num		1
514	mod Thermoregulator operating mode	MSByte LSByte	0 = Cold call 1 = Hot call	num		1
515	CAL ambient probe calibration	MSByte LSByte	0.1 °C steps, with sign range: -10.0..+10.0 °C	°C	X	0,1
516	CA4 Probe 4 value calibration	MSByte LSByte	0.1 °C steps, with sign range: -10.0..+10.0 °C	°C	X	0,1
517	CA5 Probe 5 calibration	MSByte LSByte	If An5 = 1 or 2 (humidity probe) 1 %RH steps range: -20 .. 20 %RH	%RH	X	1
			If An5 = 3 (pressure probe) 0,1 Bar steps range: -10,0 .. 10,0 Bar	Bar	X	0,1
518	EP4 Pressure (bar) corresponding to 4mA	MSByte LSByte	0,1 Bar steps range: -1,0..90,0 Bar	Bar	X	0,1
519	EP2 Pressure (bar) corresponding to 20mA	MSByte LSByte	0,1 Bar steps range: -1,0..90,0 Bar	Bar	X	0,1
520	bEE Buzzer enable	MSByte LSByte	0 = disabled 1 = enabled	num		1
521	An2 Presence of evaporator probe 1	MSByte LSByte	0 = disabled 1 = Evaporator probe 1	num		1
522	An4 Probe 4 configuration	MSByte LSByte	0 = disabled 1 = Evaporator probe 2 2 = product temperature (reading and recording)	num		1
523	An5 Probe 5 configuration	MSByte LSByte	0 = disabled 1 = humidity probe (adj and rec) 2 = humidity probe (alternate reading at room temperature, adj and rec) 3 = high pressure probe	num		1

524	Ao1 0-10V Output configuration	MSByte LSByte	0 = disabled 1 = evaporator fan adjustment (fixed speed FsE) 2 = condenser fan adjustment	num		1
525	In1 Input 1 setting	MSByte LSByte	range: -16 .. +16 (0=disabled)	num	X	1
526	In2 Input 2 setting	MSByte LSByte	range: -16 .. +16 (0=disabled)	num	X	1
527	In3 Input 3 setting	MSByte LSByte	range: -16 .. +16 (0=disabled)	num	X	1
528	In4 Input 4 setting	MSByte LSByte	range: -16 .. +16 (0=disabled)	num	X	1
529	In5 Input 5 setting	MSByte LSByte	range: -16 .. +16 (0=disabled)	num	X	1
530	In6 Input 6 setting	MSByte LSByte	range: -16 .. +16 (0=disabled)	num	X	1
531	In7 Input 7 setting	MSByte LSByte	range: -16 .. +16 (0=disabled)	num	X	1
532	AU1 Auxiliary relay 1 control	MSByte LSByte	range: -11 .. +11 (0=disabled)	num	X	1
533	AU2 Auxiliary relay 2 control	MSByte LSByte	range: -11 .. +11 (0=disabled)	num	X	1
534	Enr Datalogger probe enable	MSByte LSByte	0 =Disabled 1 =Enabled	num		1
535	int Recording interval	MSByte LSByte	range: 0 ÷ 60 min if int =0 no temp. recordings made	min		1
536	ASr Asynchronous registration	MSByte LSByte	0 = disabled 1 = enabled	num		1
537	BAt Backup battery state	MSByte LSByte	<i>Power supply OFF:</i> battery level 0 ... 100 % <i>Power supply ON:</i> 0: battery break or disconnected 1: battery charging 2: battery charged	num		1
538	cE Network connection type	MSByte LSByte	0 = Ethernet 1 = Wifi	num		1
539	cB Bluetooth Management	MSByte LSByte	0 = Bluetooth disabled 1 = Bluetooth activatable	num		1
540	cCL Cloud management	MSByte LSByte	0 = disabled 1 = active (data submission only)	num		1

541	cSL Local web server management	MSByte LSByte	0 = disabled 1 = active (data display only) 2 = active (data display and command reception)	num	1
-----	-------------------------------------------	------------------	---------------------------------------------------------------------------------------------------	-----	---

3.3

INPUTS / OUTPUTS / ALARMS STATUS

READ-ONLY								
Register	Description	Bytes meaning			U.M.	Conv	Molt	
1280	output status 1	MSByte	bit 7 (MSb)	Aux night status	num		1	
			bit 6	Aux condenser fan status				
			bit 5	Aux solenoid valve status				
			bit 4	Aux humidify status				
			bit 3	Aux heat status				
			bit 2	Aux stand-by status				
			bit 1	Aux cool status				
			bit 0 (LSb)	Aux pump-down status				
		LSByte	bit 7 (MSb)	Aux StA status				
			bit 6	Aux 1 relay				
			bit 5	Stand-by status				
			bit 4	Dripping status				
			bit 3	Cold room light relay				
			bit 2	Fans relay				
			bit 1	Defrost relay				
bit 0 (LSb)	Compressor relay							
1281	output status 2	MSByte	bit 7 (MSb)	Not used	num		1	
			bit 6					
			bit 5					
			bit 4					
			bit 3					
			bit 2					
			bit 1					
			bit 0 (LSb)					
		LSByte	bit 7 (MSb)					Not used
			bit 6					Not used
			bit 5					Not used
			bit 4					Not used
			bit 3					Not used
			bit 2					Aux 2 relay
			bit 1					Aux dehumidify status
bit 0 (LSb)	Aux defrost 2 status							

Register	Description	Bytes meaning			U.M.	Conv	Molt
1282	input status	MSByte	bit 7 (MSb)	Compressor prot. Display only (EcA)	num		1
			bit 6	Condenser fan protection (EFc)			
			bit 5	Evaporator fan protection (EFE)			
			bit 4	Oil pressure protection (EcO)			
			bit 3	Min pressure protection (EcL)			
			bit 2	Max pressure protection (EcH)			
			bit 1	Pressure switch prot. (EcP)			
			bit 0 (LSb)	Compressor thermal prot. (Ect)			
		LSByte	bit 7 (MSb)	Night digital input (energy saving)			
			bit 6	Remote Stop defrost			
			bit 5	Remote Start defrost			
			bit 4	Remote Stand-by			
			bit 3	Pump-down input			
			bit 2	Man in cold room alarm (E8)			
			bit 1	Compressor protection (EC)			
bit 0 (LSb)	Door-switch						

READ-ONLY

Register	Description	Bytes meaning			U.M.	Conv	Molt
1284	alarms 1 status	MSByte	bit 7 (MSb)	Datalogger low limit alarm (EL3)	num		1
			bit 6	Ambient low limit alarm (EL1)			
			bit 5	Datalogger high limit alarm (EH3)			
			bit 4	Ambient high limit alarm (EH1)			
			bit 3	Probe 5 error (E5)			
			bit 2	Probe 4 error (E4)			
			bit 1	Datalogger Probe error (E3)			
			bit 0 (LSb)	Evaporator Probe error (E2)			
		LSByte	bit 7 (MSb)	Ambient Probe error (E1)			
			bit 6	RTC Battery alarm (E6)			
			bit 5	FLASH data write error (Er)			
			bit 4	External EEPROM error(E0e)			
			bit 3	Internal EEPROM error(E0i)			
			bit 2	EEPROM error(E0)			
			bit 1	Alarm EP1 Power supply alarm			
bit 0 (LSb)	Alarm EP2 low battery						

READ-ONLY							
Register	Description	Bytes meaning			U.M.	Conv	Molt
1285	alarms 2 status	MSByte	bit 7 (MSb)	Not used	num		1
			bit 6	Not used			
			bit 5	Not used			
			bit 4	Network connection alarm (ES1)			
			bit 3	Evaporator fan protection (EFE)			
			bit 2	Condenser fan protection (EFc)			
			bit 1	Compressor prot. Display only (EcA)			
			bit 0 (LSb)	Light alarm (E9)			
		LSByte	bit 7 (MSb)	Compressor protection (Ec)			
			bit 6	Oil pressure protection (EcO)			
			bit 5	Max pressure protection (EcH)			
			bit 4	Min pressure protection (EcL)			
			bit 3	Pressure switch prot. (EcP)			
			bit 2	Compressor thermal prot. (Ect)			
			bit 1	'Man in room' alarm (E8)			
bit 0 (LSb)	Door is open alarm (Ed)						

READ / WRITE							
Register	Description	Bytes meaning			U.M.	Conv	Molt
1536	device status	MSByte	bit 7 (MSb)	Not used	num		1
			bit 6	Not used			
			bit 5	Not used			
			bit 4	Not used			
			bit 3	Not used			
			bit 2	Defrost forcing enabling			
			bit 1	Modific. enabling of cold room light status			
			bit 0 (LSb)	Modific. enabling of stand-by status			
		LSByte	bit 7 (MSb)	Not used			
			bit 6	Not used			
			bit 5	Not used			
			bit 4	Not used			
			bit 3	Not used			
			bit 2	Defrost forcing 1 = defrost 0 = non-defrost			
			bit 1	Cold room light key status 1 = active cold room light 0 = non-active cold room light			
bit 0 (LSb)	Stand-by status 1 = stand-by 0 = ON						

For asking the modification of one of device status bits, the master has to send into LSByte the requested value for the bit and into MSByte the corresponding bit set to 1. i.e.: for stand-by status forcing, the master has to send MSByte = 00000001 and LSByte = 00000001. For disabling the cold room light, the master has to send MSByte = 00000010 and LSByte = 00000000.

4: GLOSSARY

- **Binary Number:**
It is used in computer science for the internal representation of numbers, thanks to the simplicity to physically realize an element with two state (0,1) instead an higher number, but also with the matching with the logic values TRUE and FALSE.
- **Decimal Numer:**
On decimal system all whole numbers can be represented using the ten digits that indicates the first ten natural numbers, included zero. The value of each of these digits depends on the position occupied inside the number, and it increases in powers of 10, from right to left.
- **Hexadecimal Number:**
It is part of a positional numeric system with base 16, that means it uses 16 symbols instead usual 10 of the traditional numerical deciaml system. Hexadecimal generally uses symbols from 0 to 9 and then letters from A to F, for a total 16 symbols. Conventionally an hexadecimal number is preceded by 0x (i.e. 0x03) or by H (i.e. H03).
- **bit:**
A bit is a binary digit that is one of the two symbols of numerical binary system, usually called zero (0) and one (1). It represents the definition unit of a logic state.
It's defined also as elementary unit of the information used by a computer.
- **Byte:**
It's the quantity of bit needed to define an alphanumeric character; particularly a Byte is made by a sequence of 8 bit (i.e. 10010110).
- **Word:**
Unit of measure that fixes information lenght at 16 bits that is equivalent to 2 Bytes (i.e. 10010110 01101011).
- **LSb:**
Less significant bit of a binary digit (first bit on the right of the indicated number)
- **MSb:**
Most significant bit of a binary digit (first bit on the left of the indicated number)
- **LSByte:**
Less significant Byte of a Word (Byte on the right of the indicated Word)
- **MSByte:**
Most significant Byte of a Word (Byte on the left of the indicated Word)



PEGO S.r.l.

Via Piacentina, 6/b

45030 OCCHIOBELLO –ROVIGO–

Tel : 0425 762906

Fax: 0425 762905

www.peggo.it

e-mail: info@peggo.it

Dealer: